

**Instructions for Attaching and Locking
Casters to the Rebel Crank-Up 1000**



REBELDESK

An awesome mobile desk awaits you!

These casters will transform your Rebel Crank-Up 1000 Desk into a mobile workstation that you easily can move as needed.

If you have any questions, do not hesitate to contact Rebel Desk at 1-855- 732-3587 or info@rebeldes.com

IMPORTANT SAFETY INSTRUCTIONS

WARNING!

Failure to comply with these instructions when attaching and using the casters on your Rebel Crank-Up 1000 could result in bodily injury.

SAFETY INSTRUCTIONS

- Read all of the instructions prior to attaching or using the casters.
- Use extreme caution when lifting or moving the Rebel Crank-Up 1000.
- The casters are for use on hardwood, carpet, and ceramic tile floors. Use of the desk casters on other floor surfaces is at your own risk.
- The casters support a Rebel Crank-Up 1000 desk loaded within 100 pounds. Use the casters with more weight at your own risk.
- Ensure that all those who use the Rebel Crank-Up 1000 with casters attached are familiar with the functionality of the casters.

TOOLS NEEDED

A wrench is needed to attach the casters.

Attachment of the Desk Casters

STEP 1

- If the desk is unassembled, then lay the desk legs flat on the ground so that you can see the feet on the bottom on the desk legs.
- If the desk is assembled, remove the desktop. Then carefully move the desk so that you can see the feet on the bottom of the desk legs.

CAUTION! The Rebel Crank-Up Desk is heavy. Obtain assistance from another person if needed to move or adjust the desk.

STEP 2

- Remove all of four of the feet from the bottom of the desk legs by turning each foot clockwise.

STEP 3

- Place the threaded stem of the caster into the hole from which the foot was removed.
- Using a wrench, make **FOUR FULL, 360-DEGREE ROTATIONS** to attach the caster to the desk leg.
- Repeat this process until all four desk casters are attached.
- It is important that you make **FOUR FULL, 360-DEGREE ROTATIONS** when attaching each caster.

STEP 4

- Return or place the desk legs to the upright position.

Locking the Desk Casters

- The casters will not be locked unless you engage the brake on each one.
- The brake is the black tab that sticks upright on the caster. See the picture to the right showing the brake in the UNLOCK position.
- To lock the caster, step down on the tab so that it is in the downward position
- To unlock the caster, flip the tab to the upright position.



CAUTION! Be sure to lock all four of the casters once the desk is in place.

**START ENJOYING THE MOBILITY THAT COMES FROM HAVING CASTERS
ON YOUR REBEL DESK!**